

AMPLIFIER MINI

User Manual



CONTENTS

01.	Specifications	1
02.	Crown Operation	2-3
03.	Bracelet & Clasp	4-7
04.	Care & Water Resistance	8-9
05.	Service & Warranty	10

Movement & Case

The Amplifier is available in two references, each housing a movement selected for its precision, reliability, and harmony with the proportions of the case.

 
Mini

TYPE:	Quartz
ORIGIN:	Swiss Made
ACCURACY:	±3 minutes per year
BATTERY LIFE:	Approximately 10 years
CROWN POSITIONS:	2 - Neutral, Time-set


Setting the Time

The crown is located at the 3 o'clock position on the right-hand side of the case. Both the Mini and the Midi operate in two crown positions, though their operation differs as described below.

MINI – QUARTZ (2 POSITIONS)



POSITION 0
Neutral

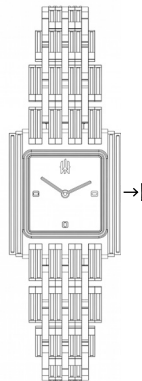 

POSITION 1
Time set

MINI – SETTING THE TIME

1

PULL THE CROWN TO POSITION 1

Gently pull the crown outward to position 1. You will feel a light click. Please note the hands will stop, and this position is not recommended for storage.

2

SET THE TIME

Rotate the crown clockwise to advance the hours and minutes. Align the hands with a reliable time reference.

3

 
PUSH THE CROWN IN

At the precise moment, push the crown firmly back to position 0. The movement will resume immediately.

To ensure water resistance, always verify that the crown is fully pushed in before exposing the watch to moisture.

Folding Butterfly Buckle

The Amplifier is fitted with a folding butterfly buckle — a double-folding mechanism that opens symmetrically from the centre. One side of the buckle carries a plate engraved with the W monogram.

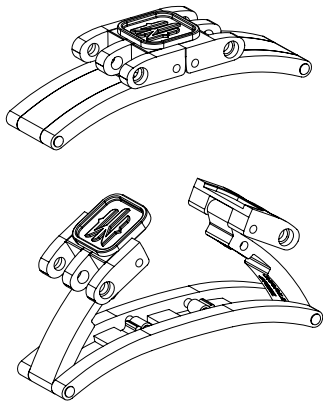

OPENING THE CLASP

PULL THE BUCKLE OPEN

1

Take hold of the buckle on both sides and draw it outward with a firm, deliberate motion. A degree of force is required to release the mechanism. The butterfly wings will open symmetrically from the centre.

OPEN THE WINGS FULLY

2

Allow the two folded wings to open outward. The bracelet is now free to be removed from the wrist.

REMOVE THE WATCH

3

Slide the watch off the wrist with care, avoiding contact between the watch and hard surfaces.

CLOSING THE CLASP

1

PLACE ON WRIST

Position the watch on the wrist with both butterfly wings open. Ensure the bracelet sits comfortably.

2

CLOSE THE NON-W-PLATE SIDE

Fold the wing on the side without the W monogram plate inward first, pressing gently until it engages.

3

CLOSE THE W-PLATE SIDE

Then press the wing bearing the W monogram plate inward until the buckle closes with a distinct click. Verify that both sides are fully engaged before releasing.

SIZING & FIT

Your Amplifier bracelet can be tailored to your wrist for a precise and comfortable fit. Links may be added or removed by an authorised retailer to adjust the overall length. For the finest adjustment, the links positioned nearest the buckle are slightly longer, allowing the fit to be tuned as closely as possible. We recommend that all sizing be entrusted to an authorised retailer to preserve the integrity of the bracelet.

Preserving Your Timepiece

WATER RESISTANCE

Your Amplifier is water resistant to 5 ATM (50 meters). It may be worn during rain, hand-washing, and shallow water activities. It is not designed for diving, high-velocity water sports, or submersion beyond 50 metres.

Always ensure the crown is fully pushed in before any exposure to water. Never operate the crown while the watch is wet.

CLEANING

Wipe the case and bracelet with a soft, lint-free cloth. For more thorough cleaning, use a slightly damp cloth and dry immediately. Avoid chemical products, solvents, and ultrasonic cleaners unless performed by an authorised watchmaker.

STORAGE

When not in use, store the Amplifier in its original case or a dedicated watch cushion, away from direct sunlight, magnetic fields, and extreme temperatures.

BATTERY REPLACEMENT — MINI ONLY

The Mini runs on a quartz movement powered by a long-life battery. Battery life is approximately ten years under normal use. Contact your retailer or an authorised service centre for replacement.

After-Sales Care

The Amplifier is covered by a manufacturer's warranty against defects in materials and workmanship. The warranty does not cover damage resulting from misuse, impact, water ingress due to an open crown, or unauthorised servicing.

RECOMMENDED SERVICE INTERVAL

We recommend a full inspection every five years, or whenever you notice any irregularity in time-keeping, crown operation, or clasp function.

AUTHORISED SERVICE

To preserve the integrity of your timepiece, all servicing should be entrusted exclusively to an authorised retailer or our after-sales service department.

Only original components are used in all authorised service operations, ensuring the watch retains its original character and value.